



DYNA CLEAN

PARTS WASHER AND DEGREASER

INSTRUCTIONS

IMPORTANT: READ BEFORE OPERATING UNIT

1. UNIT SHOULD BE LOCATED IN A WELL-VENTILATED AREA.
2. INSERT PUMP CORD INTO CONTROL CENTER RECEPTACLE (LOCATED ON RIGHT SIDE OF BASIN).
3. PLUG CONTROL CENTER CORD INTO A GROUNDED, GFCI PROTECTED, 115-VOLT, 15 AMP ELECTRICAL SOURCE ONLY.
4. DO NOT REPLACE OR OTHERWISE MODIFY THE FIRE SAFETY FUSIBLE LINK. DO NOT USE ANY OTHER DEVICE TO HOLD LID OPEN. ANY TAMPERING WITH SAFETY FEATURE OR ELECTRICAL COMPONENTS VOIDS ALL WARRANTIES.
5. EYE PROTECTION IS RECOMMENDED.
6. USE ONLY RECOMMENDED ZEP DEGREASERS. NON-APPROVED DEGREASERS CAN CAUSE SERIOUS DAMAGE TO THE PUMP AND MOTOR.
7. FOR STEP-BY-STEP FILTER CHANGING, PLEASE SEE ENCLOSED OPERATING INSTRUCTIONS.
8. FOR REPLACEMENT PARTS, ACCESSORIES OR ANY ADDITIONAL INFORMATION, CONTACT YOUR ZEP REPRESENTATIVE, ZEP INC., ATLANTA, GEORGIA 30301.

FOR YOUR PROTECTION...

AND TO MAINTAIN THE PERFORMANCE OF THE CLEANING PROCESS:

- KEEP FLAMMABLE MATERIALS AWAY FROM PARTS CLEANER
- KEEP OTHER CHEMICALS FROM COMING INTO CONTACT WITH PARTS CLEANER
- CHANGE THE ZEP FILTERS ON A REGULAR BASIS

FOR ENVIRONMENTAL OR TECHNICAL INFORMATION CALL 1-800-313-8439

THIS IS NOT A TRASH RECEPTACLE