



# GLADIATOR DISPENSER


## INSTALLATION & OPERATING INSTRUCTIONS

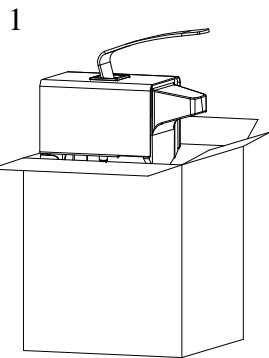


1  
Congratulations! You have just received the world's finest dispenser for foam hand care products. Before installing, please read the following instructions.

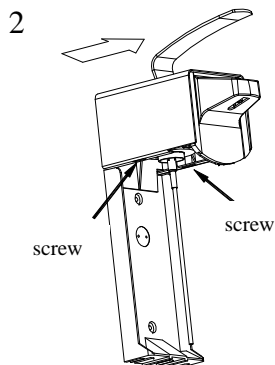


2  
Be sure that screws are loosened. Slide the cover forward.

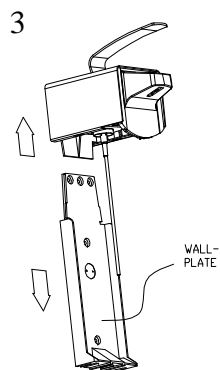


3  
Separate dispenser from wall-plate by lifting upward on dispenser while holding wall-plate.




4  
Mount wall-plate using wall-plugs and screws supplied. (To mount on drywall please use appropriate fasteners, e.g. toggle bolts). Do not use tape to mount this dispenser

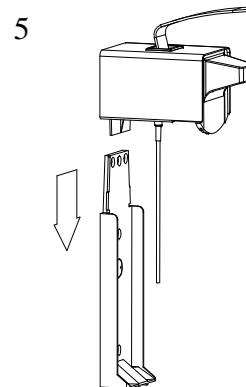


5  
Mount dispenser on wall-plate by first checking to see that aluminum cover is still pulled forward and then sliding the dispenser down onto wall-plate.

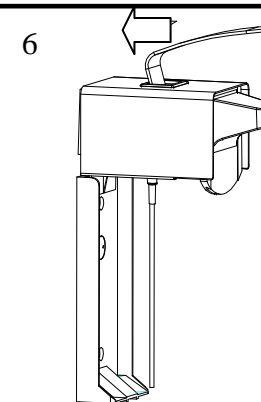


6  
Lock dispenser onto wall-plate by sliding aluminum cover tightly back into the slots on wall-plate.

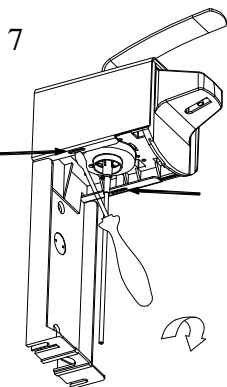


7  
Tighten both screws on the bottom of aluminum cover.

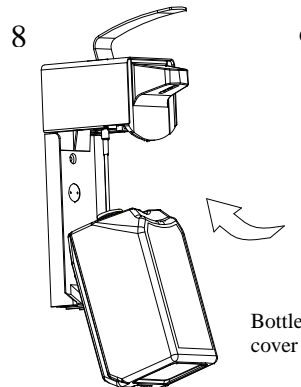

8  
Mount a 2.5 l bottle of foam soap onto dispenser by removing cap from the bottle and then sliding the bottle onto the intake pipe of dispenser. The bottle should be pushed completely up to the bottom of dispenser so that the bottom of the bottle can be pushed inward to sit securely on the ledge at the bottom of the wall-plate.

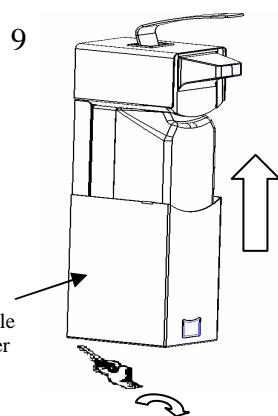

9  
Slide the bottle cover into the pump assembly and turn bottle cover lock located underneath to keep the cover in place

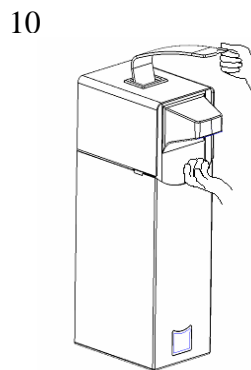

10  
The dispenser is now ready to operate by pressing downward on the lever several times until the hand cleaner is dispensed into the open hand.

**Caution:** Correct installation of this unit to ensure proper function and safety is the responsibility of the installer. It is the installer's responsibility to ensure that installation of this unit complies with all applicable codes, standards and regulatory requirements. Please completely read and understand this cautionary note and all installation/maintenance instructions before proceeding with installation. Do not install this unit above heat sources that may cause drying of the soap or soap nozzle/outlet. Do not install this unit where a failure of the mounting system or dripping of soap or water from hands may cause damage to equipment or create a potential safety hazard.

This dispenser is designed for use with foaming soap, liquid alcohol or liquid soap depending on the pump installed. Be sure to use the correct product for the pump installed. Not responsible for use of incorrect soap. Foam soap dispenser will not function properly with non-foam soap.